



SmartCOMM™ Hosted IP Complete

Yealink T48S IP Phone Reference Guide



SmartCOMM™ Hosted IP Complete

Yealink T48S IP Phone Reference Guide



Symbol	Key Description on display screen
	NETWORK IS UNAVAILABLE
	REGISTERED SUCCESSFULLY
	REGISTER FAILED
	THE SHARED/BRIDGED LINE REGISTERED SUCCESSFULLY
	HANDS-FREE SPEAKERPHONE MODE
	HANDSET MODE
	HEADSET MODE
	VOICEMAIL
	TEXT MESSAGE
	AUTO ANSWER
	DO NOT DISTURB
	CALL HOLD
	CALL MUTE
	RINGER VOLUME IS ZERO (0)
	PHONE LOCK
	RECEIVED CALLS
	PLACED CALLS
	MISSED CALLS
	CALL PARK
	INTERCOM

Symbol	Key Description
	CONFERENCE
	TRANSFER
	RE-CALL
	PHONE LOCK
	MULTI PAGING
	SPEED DIAL
	HEADSET KEY – Activates hands free for making and receiving calls without lifting the handset.
	MUTE KEY – Mutes the call so that your caller cannot hear you.
	MESSAGES KEY – Press to retrieve voicemails.
	HOLD KEY – Press to place a call on hold. Press again to return to call.
	REDIAL KEY – Redials a previously dialed number.
	TRANSFER KEY – During the call press the Transfer key, select Blind with your soft keys, enter the number you which to transfer to, & hit dial.
	SPEAKERPHONE KEY – Activates hands free for making and receiving calls without lifting the handset.